

ROMAN[®]

Collage

Pivot Door

Instruction Manual



Truelife Consumer Guarantee

Please make sure the purchaser/end user completes and returns the Guarantee card which is enclosed with this product or registers on line at www.roman-showers.com/register_guarantee.htm. Failure to validate the Roman Truelife Guarantee will mean only the 1 Year Statutory Guarantee will apply.

PRODUCT CODE REF:

IMPORTANT

- Please ensure the consumer guarantee card enclosed with this product is completed and returned to Roman; please ensure the end user retains this manual.
- Please read these instructions carefully prior to attempting installation.
- Unpack and handle the product with care to avoid damage to the product finish.
- Check for hidden electrical cables and water pipes prior to commencing any drilling work.
- Ensure that the walls where the Enclosure is to be fitted are vertical. **Note:** *It is recommended that the walls are tiled after the Tray is fitted and before fitting the Enclosure. This will provide maximum adjustment and will aid sealing.*
- No attempt should be made to rework toughened safety glass.
- At no stage should you tile over the lip of the Wall Profiles.
- Pictures used are for illustration purposes only, product designs may alter slightly as a result of continuing product development.

Component Check List: Supplied

Ref	Description	Quantities
A	Wall Profiles	2
B	Pivot Door	1
	Fitting Pack	
C	2.5mm Drill Bit	1
D	Wall Plugs (for brick and block only)	6
E	40mm Screws	6
F	Coloured Caps and Bases	9
G	9mm Screws	6
H	Roman Branding Badge	1

Equipment Checklist: Not Supplied

4.5mm Metal Drill Bit (if required)
Electric Drill
6mm Masonry Drill Bit
Silicone Sealant Gun
Bathroom Sealant Tube
Screwdriver
Spirit Level
Tape Measure
Pencil
Wall Plugs (Plasterboard)

Before Assembly and Installation of the Pivot Door

- Check to see that you have the correct Enclosure for your Tray. This can be done by referring to the label on the side of the product packaging.
- Ensure all parts are in the packaging by checking them against the parts and quantities shown on the component check list above.
- Check the product for defects. Installation queries on damaged parts can not be resolved once the installation has been completed.
- The Tray must be completely sealed along tiled walls, fitted level (check with a Spirit Level) and should have no leaks.

Notes: *It is recommended that the Wall Profiles are fitted directly onto tiles or a similar sealed surface. If walls or tray or a combination of both are out of level you will not achieve full adjustment of maximum width. Roman do not stipulate where the British Standard Safety Kite Mark should be positioned on the glass panels when being factory assembled.*



Figure A

1. Ensure that the Tray is completely level - check for any movement in the Tray by standing in it. Fill the Tray with water to check all plumbing for leaks.

Note: Please ensure that the Tray is installed as per Manufacturers Instructions.



Figure B

2. The Tray should be fully sealed along the tiled walls prior to installation with a bathroom sealant (not supplied). Prior to commencing installation of the Enclosure and once the sealant has set, spray the shower handset around all joints to check for leaks.



Figure C

3. If the Enclosure is to be installed into a three wall alcove, measure the aperture after tiling at the top, middle and bottom (**Figure C**). Ensure that the smallest size of the three measurements is used in **Stage 4**.



Figure D

4. Take a measurement from the Pivot Door (B) excluding Wall Profiles (A) and add 55mm to the measurement of the Pivot Door (**Figure D**). If the aperture is the same or greater than this measurement follow **Installation Procedure A**. If the aperture is smaller than this measurement follow **Installation Procedure B**.

Note: If using Extension Wall Profiles you will need to add an additional 35mm to the measurement above for each Extension Wall Profile used.

Installation Procedure A

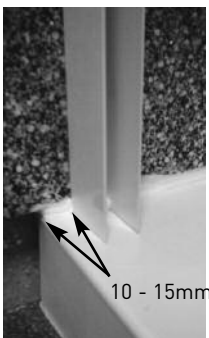


Figure a1



Figure a1i

1. Fit both Wall Profiles (A) 10 – 15mm from the front outside edge of the Tray. The lip section of both Wall Profiles should face inwards. Make sure that both Wall Profiles are completely vertical using a Spirit Level. Mark the slots with a pencil where the Wall Profiles are to be positioned.



Figure a2

2. Drill the wall with a 6mm Masonry Drill Bit (not supplied) where the Wall Profiles (A) are to be positioned. Fit the Wall Plugs (D) supplied (if going into a brick or block wall). If going into a plasterboard wall you will need to purchase appropriate wall fixings. Wipe clear all debris from the Tray before referring to the next stage.



Figure a3



Figure a3i

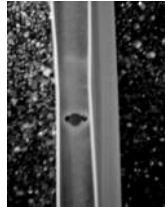


Figure a3ii

3. Where both Wall Profiles (A) are to be positioned on the Tray, place a bead of bathroom sealant (not supplied) the width of the Wall Profile along the tiled wall (**Figure a3**). Screw fix the Wall Profiles to the wall with 40mm Screws (E) supplied. Do not over tighten the Screws into the Wall Profiles as this will misshape the Wall Profile (**Figure a3ii**). Ensure the Wall Profiles stay completely vertical throughout this procedure using a Spirit Level.

Note: No sealant should be present between the Wall Profiles and the tiled walls vertically prior to screw fixing.



Figure a4



Figure a4i

4. Seal the internal joint between the Tray and Wall Profiles (A) with a bathroom sealant (not supplied).

Note: Failure to carry out this procedure correctly can result in serious water damage and is not covered by the guarantee.

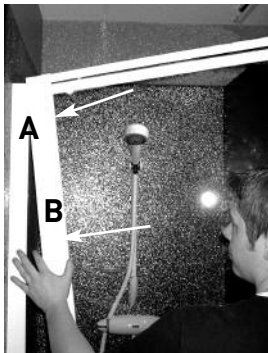


Figure a5

5. Remove the red blocks in between the glass door and the Pivot Door main frame. Assess the access required, decide left or right hand opening and ensure that the Pivot Door (B) opens outwards. Slide the Pivot Door following the arrows (**Figure a5**) into either Wall Profile channel (A) that is screw fixed to the wall. If you have selected a glass design it will be external on this product.

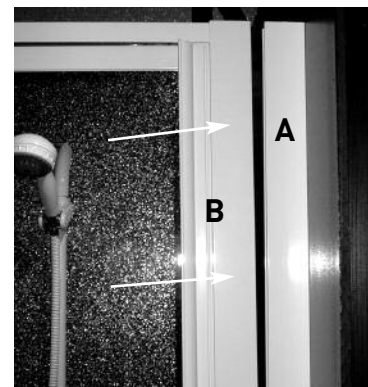


Figure a6

6. Once the Pivot Door (B) is sitting fully inside one Wall Profile (A) (**Stage 5**), slide the Pivot Door following the arrows (**Figure a6**) into the remaining Wall Profile.

Note: If using in conjunction with Side, In-Line or Neo Angle Panel(s), please refer to the relevant Panel(s) Instruction Manual.

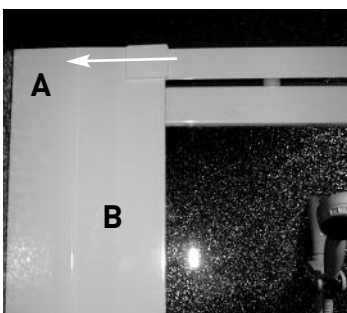


Figure a7



Figure a7i

7. Ensure that the Pivot Door (B) is sitting equally between both Wall Profiles (A). Adjust the Pivot Door within its own main frame, ensuring that the gap at the top and bottom of the glass door is **parallel** to the Pivot Door main frame. This will ensure that the Pivot Door opens and closes correctly. To achieve this adjustment, push the Pivot Door main frame from the top (on the hinge side), further into the Wall Profile following the arrow (**Figure a7**). This will ensure that the glass door lifts away from the bottom of the Pivot Door main frame (**Figure a7i**).

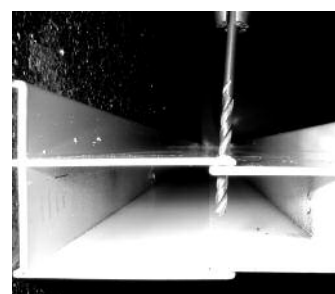


Figure a8



Figure a8i

8. Both the Wall Profiles (A) must overlap the Pivot Door (B) by at least 5mm (**Figure a8**). Inside the Enclosure on the Hinge side, drill three holes into the Wall Profile and the Pivot Door with a 2.5mm Drill Bit (C) supplied. The three holes should be drilled 100mm approx. from the top, 100mm approx. from the bottom and one in the centre. On the Ball Catch side, drill two holes one 100mm approx. from the top and one 100mm approx. from the bottom. The Pivot Door must remain **vertical and parallel** throughout this procedure.

Note: At this Stage you must not drill the Ball Catch side at the centre point as this will be shown in **Stage 10**.



Figure a9

9. Fix the 9mm Screws (G) into the Base Caps (F) then screw fix into the holes drilled in **Stage 8** with a Screwdriver. Press fit the Cover Caps (F) into place over the Screw Base Caps once the Screws are fully tightened.

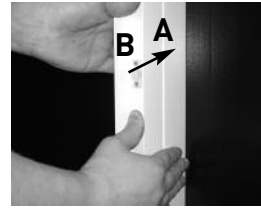


Figure a10

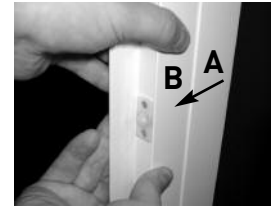


Figure a10i

10. To enable the Pivot Door (B) to open with more ease, the Ball Catch can be positioned so as to affect its resistance. To achieve this, push the Pivot Door main frame further into the Wall Profile (A) following the arrow (**Figure a10**). If you need the Pivot Door to close more firmly behind the Ball Catch, simply reverse the above and pull the Pivot Door main frame (B) following the arrow away from the Wall Profile (**Figure a10i**). Once the Pivot Door is closing more firmly behind the Ball Catch, drill with a 2.5mm Drill Bit (C) supplied, and follow Stage 9 to Screw Fix and Cover.



Figure a11

11. Seal both sides of the Wall Profiles (A) internally and externally only where they meet the tiles. Then seal the Enclosure to the base of the Tray from the outside only. Please allow at least 24 hours for the sealant to cure prior to using the Enclosure.



Figure a11i



Figure a12

12. Ensure the Roman Branding Badge (H) is placed prominently on a non moving aluminium part to qualify for your Roman Service Guarantee.

Note: If not being used as a steam unit, remove the Colourless Drip Seal from both sides of the pivoting point on the top of the glass door. The Pivot Door is an outward opening door which can result in water dripping onto the floor when being opened. Please ensure care is taken.

Installation Procedure B

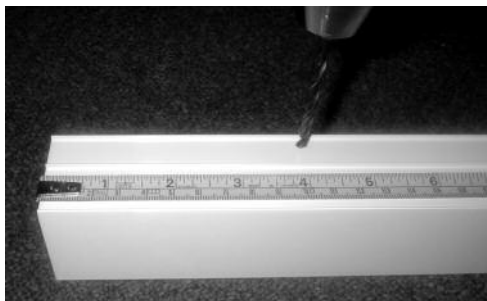


Figure b1

1. Fit one Wall Profile (A) to the wall as in **Stages 1 – 4** in Installation Procedure A. Mark out and drill three holes with a 4.5mm Metal Drill Bit (not supplied) into the lip of the remaining Wall Profile. The three holes should be drilled 100mm approx. from the top, 100mm approx. from the bottom and one in the centre.

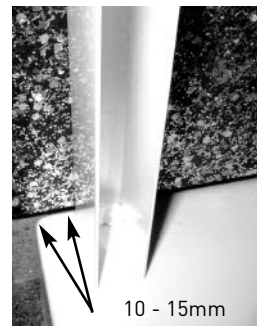


Figure b2

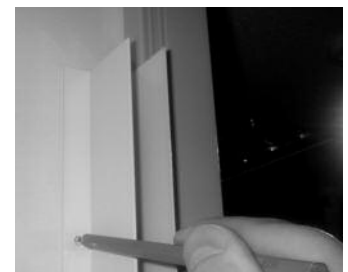


Figure b2i

2. To align the Pivot Door (B) correctly with the Tray edge, position the remaining Wall Profile (A) 10 – 15mm from the front outside edge of the Tray, ensuring this matches the Wall Profile already secured. With a pencil, mark the pre-drilled holes onto the wall ensuring that the Wall Profile stays vertical (using a Spirit Level).



Figure b3

3. Drill the wall with a 6mm Masonry Drill Bit (not supplied) where the remaining Wall Profile (A) is to be positioned. Fit the Wall Plugs (D) supplied (if going into a brick or block wall). If going into a plasterboard wall you will need to purchase appropriate wall fixings. Wipe clear all debris from the Tray before referring to the next stage.

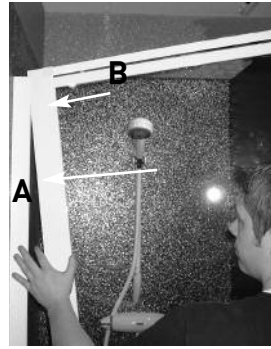


Figure b4



Figure b4i

4. Slide the remaining Wall Profile (A) over the Pivot Door (B) and then slide the Pivot Door into the fitted Wall Profile (**Figure b4**). Where the remaining Wall Profile is to be positioned on the Tray, place a bead of bathroom sealant (not supplied) the width of the Wall Profile along the tiled wall (**Figure b4i**).

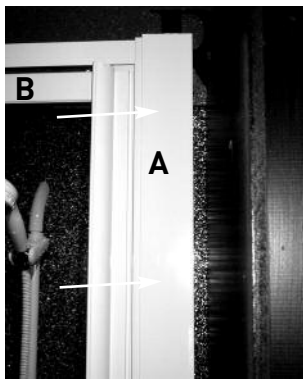


Figure b5

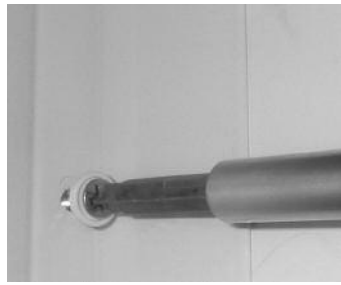


Figure b5i

5. Adjust the loose Wall Profile (A) to ensure that the holes drilled line up with the Wall Plugs. Place the 40mm Screws (E) into the Base Caps (F) and then screw fix the remaining Wall Profile to the wall with a Screwdriver (not supplied).

6. Now follow Stages 7 – 12 in **Installation Procedure A**.

Maintaining Your Enclosure

DO NOT use acidic based descaler products or products which are unsuitable for cleaning enamel surfaces, including abrasive cleaners or cleaners containing bleach or solvents, as these products will affect both the anodised and coated framework.

NEVER use scouring powder or pads or sharp instruments when cleaning the enclosure.

Roman Shower Enclosures and Bath Screens are designed for luxury showering and with care and attention you can keep them looking new for longer by using the strongly recommended **Roman Ultra Care**, the multi-purpose glass protector after cleaning (*See back page*). Alternatively, occasionally wipe your Roman Shower Enclosure with a mild detergent diluted with water and polish with a soft cloth. If you live in a hard water area, periodically clean with a 50/50 solution of white vinegar and soak for five minutes and remove any limescale residue by rinsing with warm water. Periodically clean the seals of your Enclosure with an anti-bacterial spray. This is all you require to keep the glass, seals and coated / anodised aluminium parts looking new.

Should you experience any problems during installation please refer back to your Instruction Manual to ensure you have completed every stage correctly. In addition a Trouble Shooter Guide has been provided in this manual, alternatively please contact Customer Services on:

01325 328034.

To enable Customer Services to provide you with an excellent level of service it is important that you quote your Product Code and Reference Number - these numbers can be found on the front of your Instruction Manual

Trouble Shooter Guide

Problem		Solution
Leaking	①	Check that the internal joints between the Tray and Wall Profiles have been sealed correctly (Figure a4/a4i).
	②	Ensure that the Tray is fully sealed along the tiled walls prior to installation (Figure B).
	③	If the internal joint between the Enclosure and Tray is sealed, this will cause leakage – the sealant must be removed.
	④	Ensure the Wall Profiles on the tiled walls are sealed both internally and externally (Figure a11/a11i).
	⑤	Ensure that the external joint between the Enclosure and Tray is fully sealed.
Enclosure alignment on Tray	①	Is the Enclosure fitted onto a tiled wall?
	②	Are the Wall Profiles fitted approx. 10 - 15mm from the front outside edge of the Tray?
	③	Are the Wall Profiles completely vertical?
Doors juddering	①	Ensure that the gap at the top and bottom of the door is parallel, this will ensure that the door opens and closes correctly (Figure a7/a7i).
	②	Have you taken out the Colourless Drip Seal from the top of the glass door (Stage 12)?
Doors not closing	①	Does the door engage the ball catch?
	②	Are the Wall Profiles completely vertical?
	③	Is the ball catch at the correct adjustment (Figure a10/a10i)?



Ultra Care

THE MORE YOU SPRAY – THE MORE YOU PROTECT.

Roman Ultra Care is a product from Roman designed to give all your shower and bathroom surfaces a long-lasting sparkle. The benefit of Ultra Care is the more you spray, the more you protect.

Ultra Care is a multi-purpose glass protector that repels the build-up of grime, limescale and stains.

Roman Ultra Care was developed for Roman shower enclosures and screens. It is a unique and effective non-filming formula for all glass surfaces, tiles, shower seals and aluminium frames, taps, trays and baths.

Why not try it on your car windscreen!

For your nearest stockist please call +44 (0) 1325 328034

ROMAN LIMITED, WHITWORTH AVENUE, AYCLIFFE INDUSTRIAL PARK, COUNTY DURHAM, DL5 6YN, ENGLAND, UK.

Member of



GENERAL RECEPTION: PHONE +44 (0) 1325 311318 FAX +44 (0) 1325 319889

CUSTOMER SERVICES: PHONE +44 (0) 1325 328034 FAX +44 (0) 1325 328031

SALES ENQUIRIES: PHONE +44 (0) 1325 328033 FAX +44 (0) 1325 328027

www.roman-showers.com